


ASSA ABLOY

Installation Instructions

As Easy As A B C - C

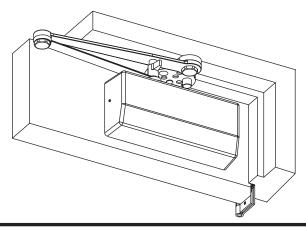


Universal Door Closers with Heavy Duty Parallel Arms:


A2 - H.O. without Backstop


A4 - N.H.O. with Backstop

A5 - H.O. with Backstop

DC8210 Series Multi-Sized 1 thru 6

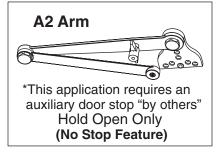

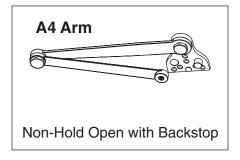

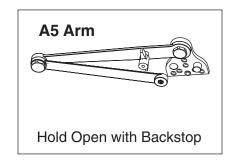


IMPORTANT:

- An improperly installed or incorrectly adjusted door closer may cause **property** damage or **personal injury**; and will void product warranty.
- To avoid personal injury, DO NOT DISASSEMBLE THIS DOOR CLOSER BODY.
- Door closers must be securely fastened to a properly reinforced door and frame with fasteners provided.
- Door closers with a HOLD OPEN ARM are not permitted to be installed in fire door assemblies.
- Door and frame must be specifically templated for 85°, 90°, 100° or 110° door swing.
- Doors should be hung on ball bearing or anti-friction hinges/pivots.
- Door closer must not be installed on the exterior of a door in an exterior wall of a building.


Size of Door & Door Closer							
Type of Installation	Interior	Exterior In -swinging	Exterior Out -swinging	Recommended Closer Size	**Max. Opening Force lbs/f		
Parallel Arm	2'4" 2'6" 3'0" 3'6" 4'0" 4'6"		2'6" 3'0" 3'6" 4'0"	1 2 3 4 5	8 14 16 22 24 26		

 
TO DETERMINE HAND OF YOUR DOOR:



^{**}NOTE: These forces are for standard templating with bearing type hinges and do not account for pressure differentials and draft.

 
DC8210xA2, A4, or A5 HD Parallel Arm Installation Instructions



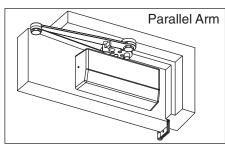

A Template


Mark Door and Jamb (for QUIK-INSTALL® bracket and arm bracket)

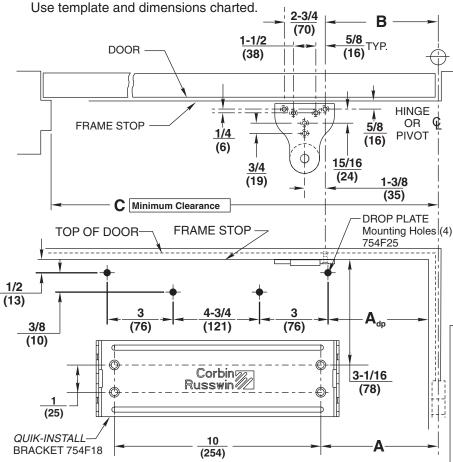


OPENING MAXIMUM	A Quick Install Bracket	A _{dp} Drop Plate	B Soffit Bracket	C MINIMUM Clearance
85°	8-3/4 (222)	8-3/8 (213)	12-7/16(316)	28-7/8 (733)
90°	7-3/4 (197)	7-3/8 (187)	11-1/2 (292)	28 (711)
100°	6-1/4 (159)	5-7/8 (149)	10 (254)	26-3/8 (670)
110°	4-7/8 (124)	4-1/2 (114)	8-5/8 (219)	25-1/8 (638)

NOTES:


- Check hand of door, see page 1.
- Right Hand Application Shown Left Hand Opposite
- Dimensions given in inches (mm). Do Not Scale Drawing.
- Closer must be installed in a true horizontal plane to ensure proper closer performance.

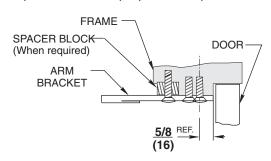

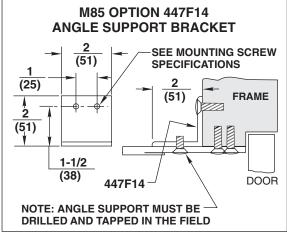


MOUNTING SCREW SPECIFICATIONS ARM AND QUIK-INSTALL BRACKET

#12-14 self-drilling screw. 1/8 (3) diameter pilot hole required for Wood Applications.

 



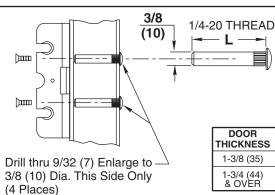

SEX NUT

LENGTH "L"

1-9/32 (33)

1-21/32 (42)


DC8210xA2, A4, or A5 HD Parallel Arm Installation Instructions



Previous Page (2)


This Page

B Mount QUIK-INSTALL® Bracket

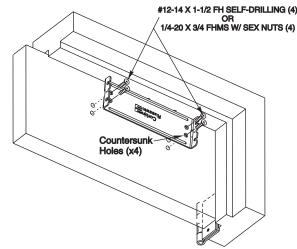


Mount Closer Body to QUIK-INSTALL Bracket

- Start the four mounting screws into the four closer mounting holes.
- Place the closer onto the QUIK-INSTALL bracket with the four mounting screws inserted into the four QUIK-INSTALL bracket slots.
- Tighten the four mounting screws to fasten the closer body to the QUIK-INSTALL bracket.

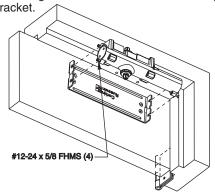


DA4 & A5 Backstop Arms Only Arms shipped for Left Hand Door. To change handing:

 Remove Stop from Soffit with 5/32 Allen Wrench. Remove Filler Plug. Switch Stop and Filler Plug to opposite sides. Insert Stop and tighten. Push Filler Plug into hole.




Mount Arm to Door Frame

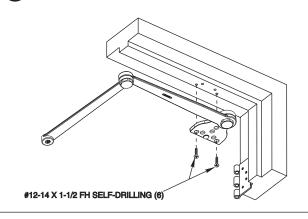


(F) Connect Arm To Closer

Using 1/8 hex wrench provided, close (turn clockwise) CLOSING SPEED VALVE (see page 4 for location on closer). **DO NOT OVER TIGHTEN.**ALL ANGLES SHOWN ARE APPROXIMATE

- Open door to approximately 60°
- Using wrench on underside of spindle, rotate spindle approximately 135° toward hinge edge of door.
- Install arm on spindle at an approximate 90° angle to door.
- Reopen CLOSING SPEED VALVE.
- Install and tighten 5/16 Hex Head Arm Washer and Screw Assembly.

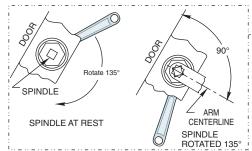

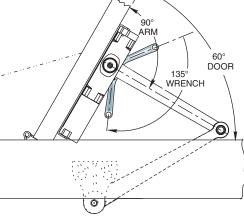



GADJUST CLOSER: See Page 4

DC8210xA2, A4, or A5 HD Parallel Arm Installation Instructions


Spring Power Adjustment


Locate spring power adjuster from Illustration below DC8200 Size 1 thru 6 Adjustment See Chart

DC8200 SPRING POWER ADJUSTMENT CHART

- All DC8200 closers are factory set at an approximate Size 3.
- Adjust closer as necessary for door size using this chart.
- Readjustment may be required to suit prevailing conditions.

	Size of De	Spring Power		
Interior	Exterior In Swing	Exterior Out Swing	Ådjustment No. Full Turns Clockwise	Equivalent Closer Size (Approx.)
2 4" (712)	2 ['] 6" (764)		2-7	3
2 6" (764)	3 ['] 0" (915)		7-11	4
3 0" (915)	3'6" (1067)	2'6" (764)	11-15	5
3 6" (1067)	4'0" (1219)	3'0" (915)	15-17	6

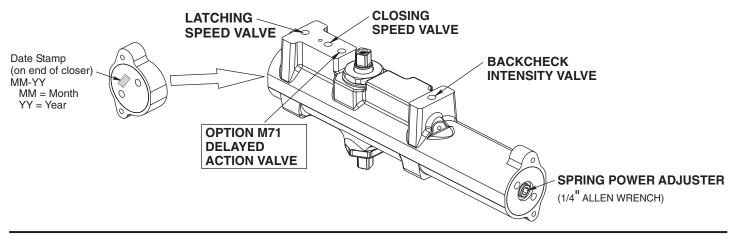

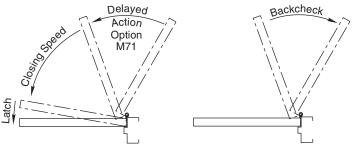

Closing Speed Valve (1/8 Allen Wrench Provided)

To adjust speed of door closing from fully open to a position 2" to 5" from closed, turn Closing Speed Valve CLOCKWISE to SLOW closing, COUNTER-CLOCKWISE to SPEED closing.

Latching Speed Valve (1/8 Allen Wrench Provided)

After closing speed has been obtained, turn latching speed valve CLOCKWISE to SLOW latching or COUNTER-CLOCKWISE to SPEED latching for last 2" to 5" of door travel.

NOTE: Set combination of CLOSING and LATCHING speeds to between 3 and 7 seconds Use of door by handicapped, elderly or small children may require even greater closing time.

Delayed Action Valve (1/8 Allen Wrench Provided)


Turn valve CLOCKWISE to SLOW closing, COUNTER-CLOCKWISE to SPEED closing. Delayed action may be adjusted from 20 seconds to 90 seconds, depending on degree of door swing. Delay occurs at the beginning of the door closing cycle from fully open down to 70°, where the closing speed valve then begins its control.

Backcheck Intensity Valve

Turn valve COUNTER-CLOCKWISE to reduce backcheck or CLOCKWISE to increase backcheck. (Backcheck should be set to give a soft cushioning action, not a sudden stop.)


Installing Cover

- Slip cover over closer.
- Hold tightly against QUIK-INSTALL® Bracket surface.
- Secure on each side with 6-32 x 1/4" PBHMS screws.

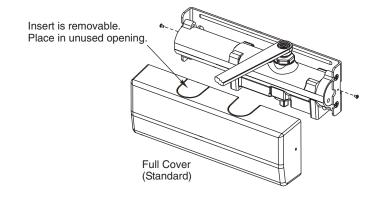

Hold Open Operation (A2 and A5 Arms only)

 A quarter turn of the tee handle in either direction engages or disengages the hold open feature.





Copyright © 2006, 2009, Corbin Russwin, Inc., an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Corbin Russwin, Inc. is prohibited.