## SARGENT® 1331 DOOR CLOSER INSTALLATION INSTRUCTIONS WITH FOLLOWING ARM SETS: JH, JHZ and JPH9

**Strength Adjustment From Size 1 Through 6.** 


CAUTION: FAILURE TO INSTALL OR ADJUST PROPERLY MAY RESULT IN INJURY OR DAMAGE

FOR ASSISTANCE, CALL SARGENT AT 1-800-727-5477 or www.Sargentlock.com


# SARGENT ASSA ABLOY


NOTE: These installation instructions to be used for product manufactured on or after Nov. 1, 2013. Date Code: KU and shipped with arms shown on template pages. See page 6 for date code location.

### Choose From 1 of 3 Applications

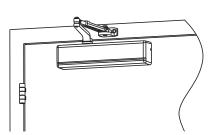


JH Arm (Regular Arm) Right hand (RH) door shown. Left hand reverse (LHR) See page 2

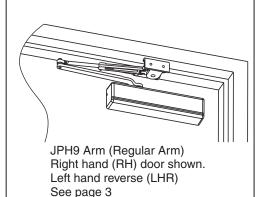


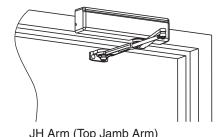


JH Arm (Top Jamb Arm) Right hand (RH) door shown. Left hand reverse (LHR) See page 5

- Doors should be hung on ball bearing or anti-friction hinges.
- A separate door stop is recommended.
- Door and frame must be properly reinforced.
- Always adjust spring power before adjusting control.
- Adjust closing time speed between 3 and 7 seconds from 90° to 0°. Greater closing times may be required ADA.
- These door closers should NOT be installed on the exposed side (weather side) of exterior doors
- **NOTE:** For special applications a separate door and frame preparation template is packed with these instructions. Use this instruction sheet for installation sequence and closer adjustments only.

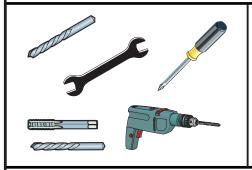

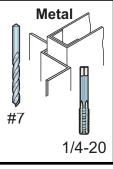





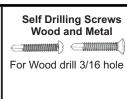







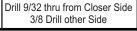

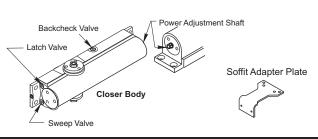


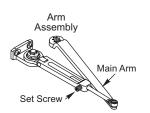



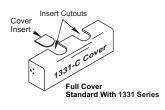


### **ASSA ABLOY**

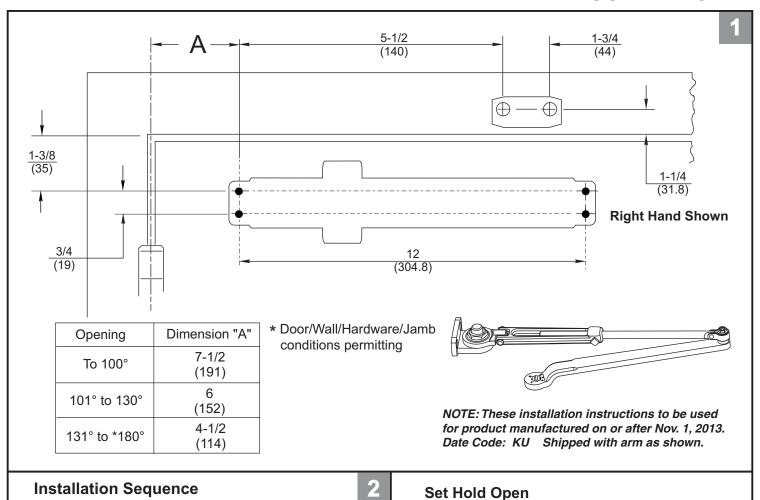


# Right Hand Door Shown C Left Hand Nut Down 90° E A See page 6 for spring


and valve adjustments.

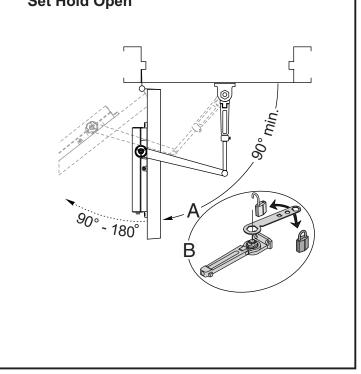


63-8175-6000-999

### ASSA ABLOY

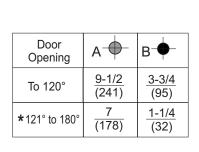


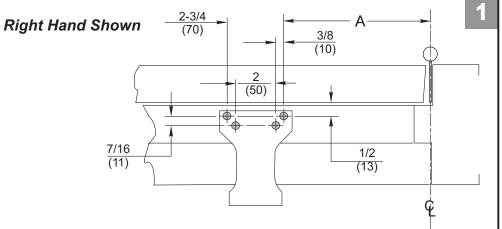

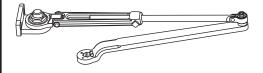


NOTE: These installation instructions to be used for product manufactured on or after Nov. 1, 2013. Date Code: KU Shipped with arm as shown.

**Installation Sequence** 

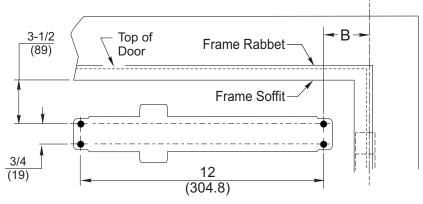


# Right hand door shown: Adjustment nut facing up


For Left hand door, Adjustment nut must face down.

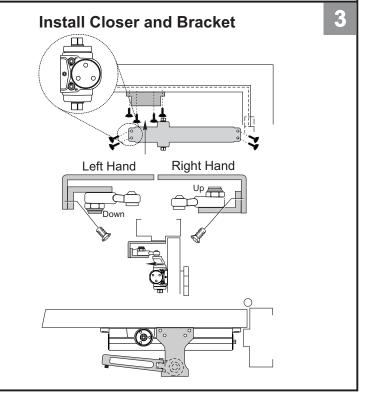


### ASSA ABLOY

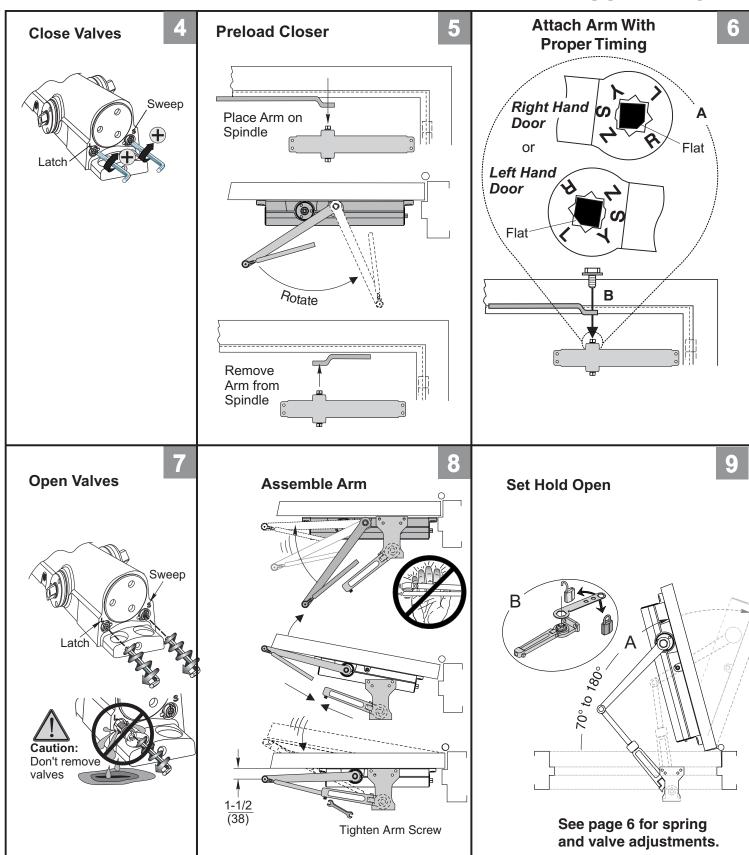

### **ASSA ABLOY**

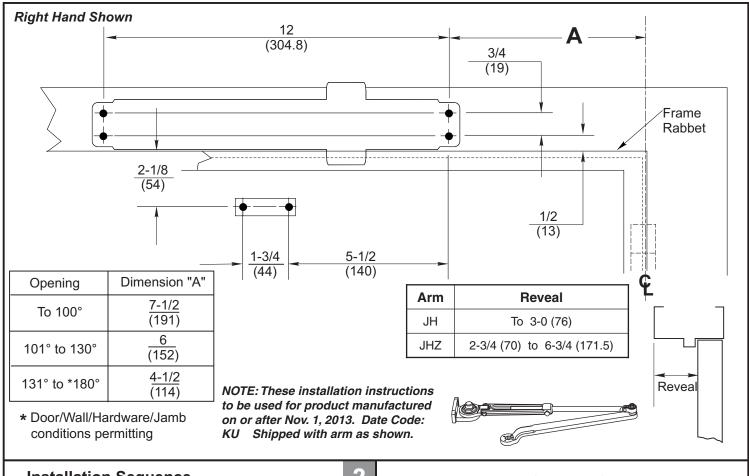

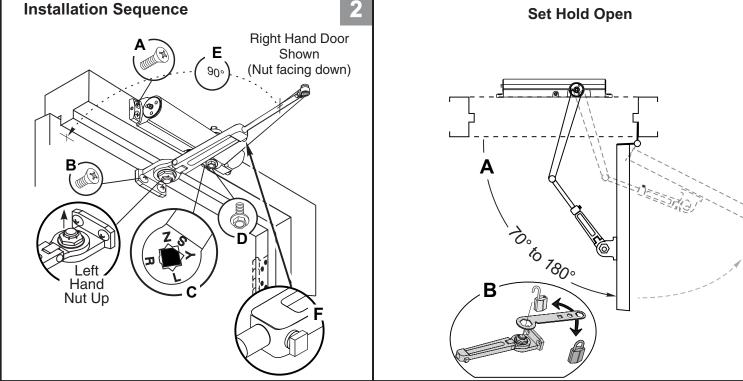

63-8175-6000-999

### **Spring Power Adjust**

Adjustment Chart				Number of Turns Required				
	DOOR	TYPE OF INST.	*	MAXIMUM DOOR SIZE				
				32" (0.85M)	36" (0.90M)	42" (1.00M)	48" (1.20M)	
8100/8300/8500	INTERIOR	Regular Arm Top Jamb	TURNS OF OWER NT WRENC	5	8	11	13	
		Parallel Arm		7	10	13	16	
	EXTERIOR	Regular Arm Top Jamb		7	10	13	16	
		Parallel Arm		9	12	15	18	


\*20 FULL (360°) TURNS MAXIMUM AVAILABLE Closer is shipped set at mid range setting = 10 turns



The closing force is adjustable from a size 1 to a size 6, as outlined in ANSI Standard A156.4. When these series of door closers are installed and adjusted to conform to ADA reduced opening force requirements (5 lbs max.) for interior doors, they may not have adequate closing force to reliably close and latch the door. Power adjustments charted on this page are recommended where possible, to ensure proper door control.


### **SARGENT**


### **ASSA ABLOY**

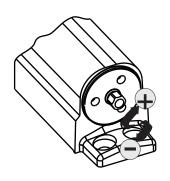


By law the Americans with Disabilities Act (ADA) may require that door closer installation comply with accessability guidelines.


### Valve Adjustments

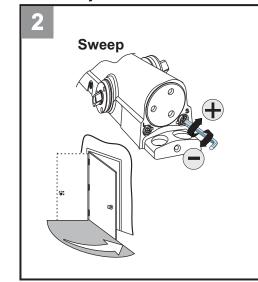


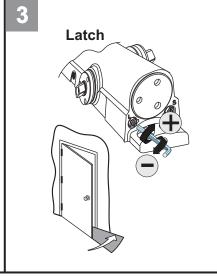


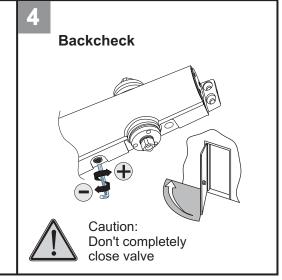

Adjust Closing Speed Time to between 3 to 7 seconds from 90°. Use of the door by handicapped, elderly or small children may require greater closing time.

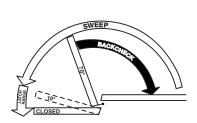

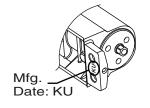

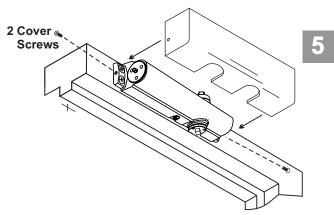

63-8175-6000-999

Copyright © 2013 Sargent Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Sargent Manufacturing is prohibited.