



DL1200 - DL1300 - PDL1300 NARROW STILE ACCESS LOCKS MOUNTING AND INSTALLATION INSTRUCTIONS

345 Bayview Avenue
Amityville, New York 11701
For Sales and Repairs 1-800-ALA-LOCK
For Technical Service 1-800-645-9440
or visit us at <http://tech.napcosecurity.com/>
(Note: Technical Service is for security professionals only)
Publicly traded on NASDAQ Symbol: NSSC

© ALARM LOCK 2015

WI1458F 05/15

GENERAL DESCRIPTION

The DL1200, DL1300 and PDL1300 are manually programmable narrow stile entry trim for *Adams Rite*® 4710, 4730 and 4900 deadlatch locks, and 1850, 1950, 4070, MS1850S and MS1950S series deadbolts for narrow stile aluminum doors*.

The DL1200, DL1300 and PDL1300 will retract the existing Adams Rite® latch when an access code is entered (or a credential is presented) and the lever is pressed down (or the turnpiece turned). The trim is designed to operate with any Adams Rite® interior device such as a "pushpaddle" or lever. Because Adams Rite® trim exists on the inside, the "hold-back feature remains operational for a continuous unlatched function (see Adams Rite® instructions). Entering a *passage mode* function code activates *latched passage mode* (device is unlocked but the lever or turnpiece is engaged continuously) until another passage mode function code is entered, re-locking the trim. All locks are equipped with a mechanical metal key override. See OI310, OI311 or OI312 for programming information.

MECHANICAL FEATURES

The overall enclosure housing is 14 3/8" inches high, 1 5/8" inches deep and 1 3/4" inches wide. The trim is through-bolted to the stile of the door (using four #10 screws) and are secured on the interior side of the door. Supported stile thickness is 1 3/4".

- HID Proximity ID cards, keyfobs and proximity tags supported in PDL1300 series which features built-in Proximity reader (High security applications can require use of both PIN code plus Proximity ID card for access)
- Real time clock and PC programmable automatic lock/unlock scheduling for 500 events (1300 Series models)
- Wide weatherproof operating range from -31 to 151°F (-35 to 66C)
- Provides 100,000 operations using off-the-shelf long life DL123A lithium batteries, and includes audible and visual low battery alert
- Non-handed; fully field-reversible
- Mechanical key override; interchangeable cores supported (Corbin/Russwin, Yale, Schlage, Medeco)
- Mortise Cylinder, 1 1/4" supplied (supports 1-1/8", 1 1/4", 1-3/8" and 1 1/2")
- Compact styling 14-3/8"H x 1-5/8"D x 1 3/4"W
- Backsets 31/32", 1-1/8" and 1 1/2"; stile thickness 1 3/4"

- DL1200 Series supports 100 users, fingertip/keypad programmable
- DL1300 Series supports 2000 users and includes 40,000 event audit trail and 500 event schedule. Keypad or PC programmable
- PDL1300 Series supports 2000 PIN or Proximity users and includes 40,000-event audit trail and 500 event schedule. Keypad or PC programmable
- Aluminum door retrofit outside trim for Adams Rite® 1850, 1950, 4710, 4070, 4730, 4900, MS1850S and MS1950S Series locks
- Familiar Trilogy® programming & electronics
- All-metal, vandal-resistant 12-button keypad supports 3-6 digit PIN codes (3-5 digits on the DL1200), and multilevel user hierarchy (master, manager, supervisor and basic users)
- Keypad or PC programmable (see model information). Quickly and easily add or delete users and enter "passage mode", service codes, group lock-out & group-enable

TABLE OF CONTENTS	
GENERAL DESCRIPTION.....	1
MECHANICAL FEATURES.....	1
MOUNTING AND INSTALLATION	2
INSTALL CYLINDER	3
VERIFY HAND	3
INSTALL LEVER.....	4
INSERT INTERFACE CYLINDER	4
INSTALL LOCK.....	5
INSTALL BATTERIES.....	6
TEST OPERATION.....	7
NAPCO LIMITED WARRANTY.....	8

*Adams Rite Manufacturing Co., Pomona, CA. www.adamsrite.com. All products, product names and services described in this manual are for identification purposes only and may be trademarks of their respective companies.

MOUNTING AND INSTALLATION

For factory prepped doors, use dimensions shown. Dimensions are referenced from center of 1¼" cylinder hole. The Adams Rite® lock determines the backset.

When mounting the new Adams Rite® locks:

- Do not install the outside cylinder -- this trim replaces it;
- Do not install the faceplate (access to the cylinder set screw in the lock is required during mounting and installation).

Mechanical Override Cylinder Cams

The DL1200 and DL/PDL1300 trim requires the use of an oval *Alarm Lock* cam (supplied with cylinder). For other manufacturers, please see the charts below.

Cams for Standard Mortise Cylinders	
Corbin-Russwin	HW1344
Marks	HW1346
Arrow	HW1348
Sargent	HW1348
Schlage	HW1349


Cams for IC Mortise Cylinders	
Best*	HW1343
Corbin-Russwin	HW1345
Medeco	HW1347
Schlage	HW1350
Yale	HW1351
*Will be supplied together with Best IC Housing (HW1352)	

Cylinder Length	Collar P/N
1- ³ / ₈ "	HW1331
1- ¹ / ₂ "	HW1342


Cylinder Collars:

The DL1200 and DL/PDL1300 can use a 1-³/₈" & 1¼" mortise cylinder without the use of a collar (1¼" requires two plastic spacers, supplied). For cylinders longer than 1¼" a collar is required.

Order collars from an *Alarm Lock* distributor.

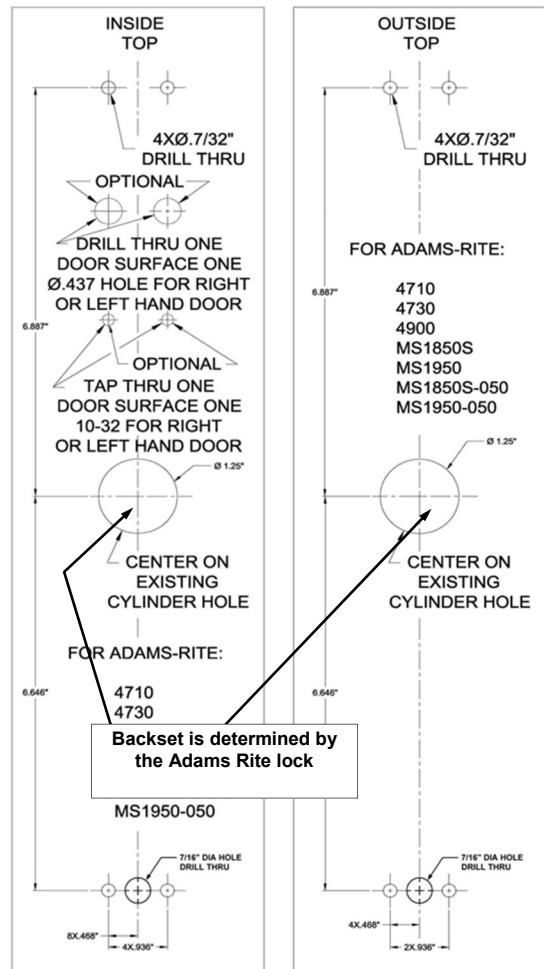

Template (use W11459)

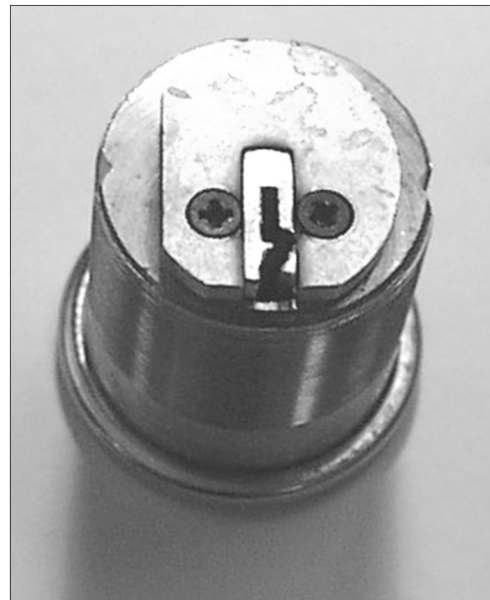

Cam for Mechanical Override Cylinder

Install Cylinder

1. **Install Cylinder if not already installed at the factory.** Screws A & B (see Fig. 1) are correctly set at factory. If it is difficult to screw in the cylinder, loosen the two screws near the actuator (A) one turn. If you find the cylinder is still difficult to screw in, then loosen the other screws (B) one turn. **Do not loosen the screws all the way or it may be difficult to replace them properly!**

Note: The trim is manufactured to use a 1-1/8" or 1 1/4" Alarm Lock mortise cylinder with a HW-1302 cam. If the cylinder that will be used is longer than 1 1/4", a collar must be utilized. Please see the collar information on the previous page.

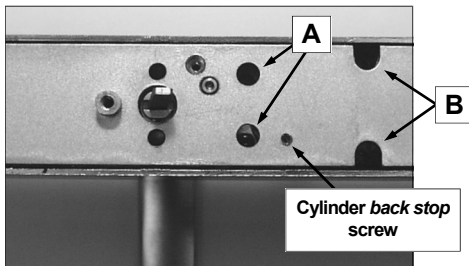


Fig. 1: Install Cylinder if not already installed at the factory

- 1a. **Insert key half-way into the cylinder, then screw it in.**

See Fig. 1a. If cylinder will not seat flush, the cylinder back stop screw may require loosening. Cylinders that are longer than 1 1/4" will require a collar, which will stick out from the surface when correctly installed. Please see the cylinder information on the previous page.



Fig. 1a: Insert key 1/2 way into cylinder and screw in

- 1b. **After the cylinder is screwed in all the way, center the keyway toward the bottom** (see Fig. 1b). If an interchangeable core cylinder is utilized, then center the interface toward the bottom. Tighten the screws that were loosened in step 1.



Fig. 1b: Center keyway toward bottom

- 1c. **Remove the key. Use a 1/16" hex wrench to screw the cylinder back stop screw in fully.** (See Fig. 1c) The key should now only rotate counter-clockwise.

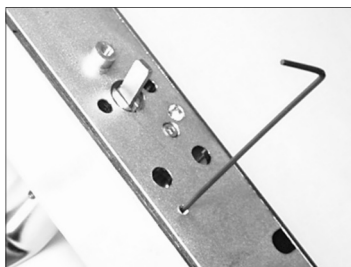


Fig. 1c: Use 1/16" hex wrench to screw in the cylinder back stop screw

NOTE: To remove cylinder, reverse steps 1a-1c.

Setting the Door "Hand"

2. With the key always on the outside, the door *hand* is generally determined by the location of the hinges--hinges are either inside or outside. See Fig. 2.

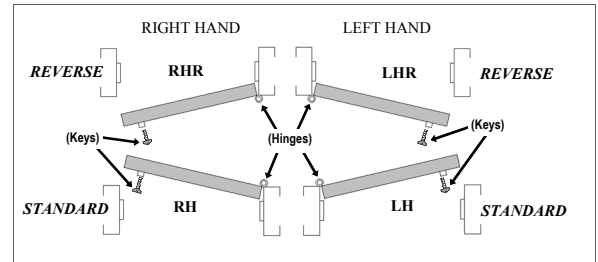


Fig. 2: Cross Section Top View -- Door Hand

- 2a. **Setting Hand of Interface Cylinder/Adapter**

See Fig. 2a to determine if changing the retractor arm is necessary; if so, continue with the steps below.

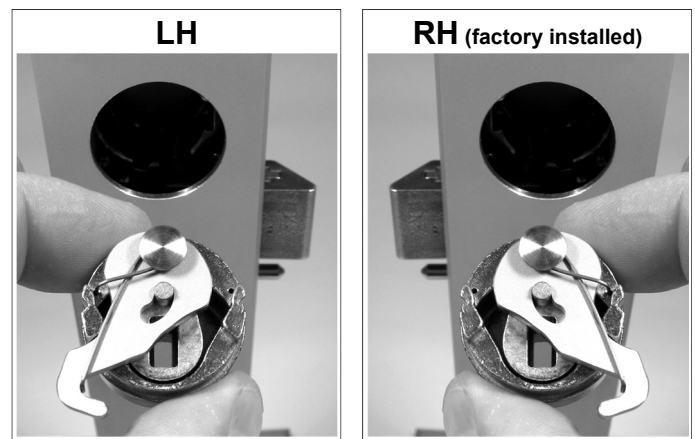


Fig. 2a: LH and RH orientation for Interface cylinder, retractor arm, spring and door latch. The RH orientation is shipped from the factory.

- 2b. **Remove the retaining ring** with a small tool such as screwdriver or small needle-nose pliers (see Fig. 2b).

Pull out the pin and the spring.

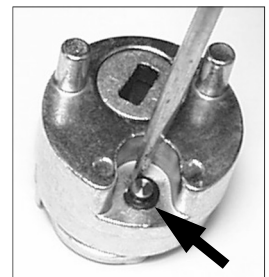


Fig. 2b: Remove retaining ring.

- 2c. **Flip over the retractor arm** as shown in Fig. 2c.

- 2d. There are two types of springs; an RH spring installed at the factory, and an LH spring (supplied). Select the LH spring (see Fig. 2d).

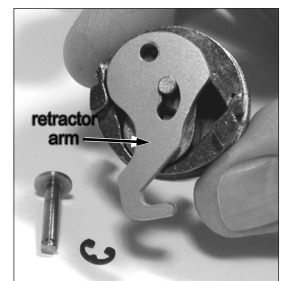


Fig. 2c: The retractor arm placed for LH operation.

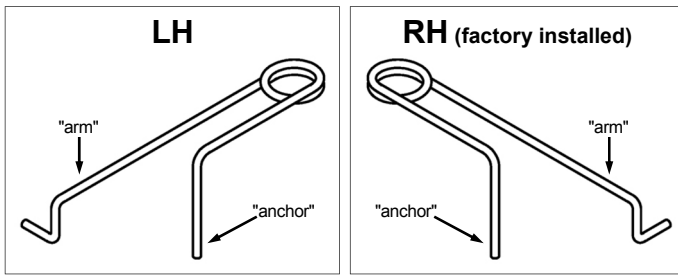


Fig. 2d: The RH spring is installed at the factory; the LH spring is supplied.

2e. Pre-load the spring by placing the "anchor" end over the "arm". See Fig. 2e below.

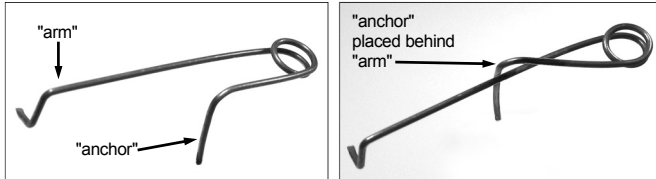


Fig. 2e: Pre-load the spring (LH shown) before installing.

2f. Insert the pin through the top of the new LH spring.

2g. Insert the pin/spring through the retractor arm hole while simultaneously inserting the "anchor" end of the spring into the small hole in the cylinder/adaptor. See Fig. 2g.

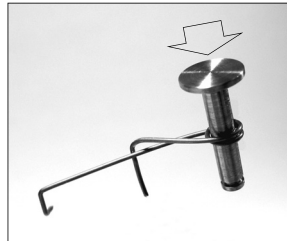


Fig. 2f: Insert pin into top of spring.

Pull the arm and hook its end onto the retractor arm.

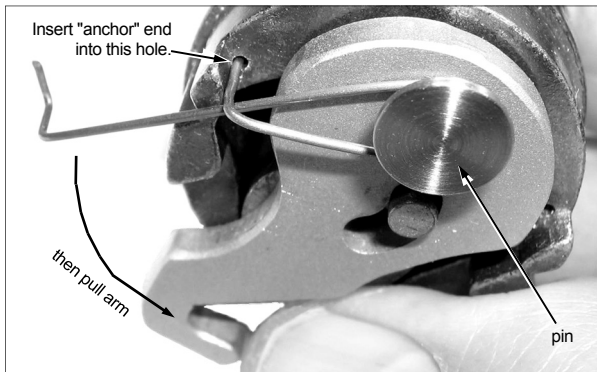


Fig. 2g: Insert pin and spring; pull arm and clip on hook cam lever.

2h. Re-install the retaining ring displayed in Fig. 2h.



Fig. 2i: Ready for LH operation.

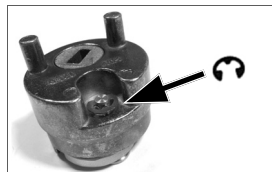


Fig. 2h: Re-install retaining ring.

Finished configuration shown at left (Fig. 2i).

Install the Lever

3. Install the lever with proper orientation for the lock/door hand used. Tighten the set screw using a 1/8" hex wrench (see Fig. 3).

IMPORTANT! The top of the set screw must be at (or below) lever surface. If not, check to ensure the lever is fully pushed toward the trim.

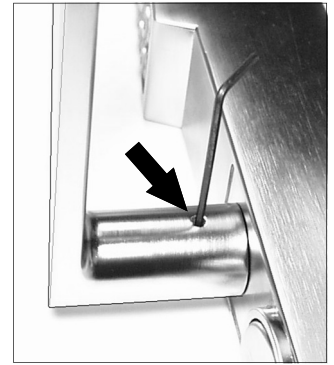


Fig. 3: Tighten lever set screw with 1/8" hex wrench

3a. Install the Adams Rite® product as indicated by the Adams Rite® door prep guidelines and instructions.

- If a new installation, the face plate must NOT be installed at this time.
- If a retrofit installation, remove the face plate.

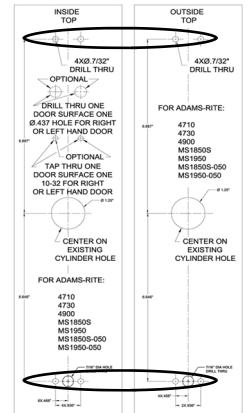


Fig. 4: Template (WI1459) through-bolt holes (circled)

Prepare the Door For "Through-Bolting"

4. Place template (WI1459) as shown. **Important:** Place the template on top of existing cylinder hole and *parallel* to the door edge.

4a. Drill **completely** through the door for through-bolting the four mounting holes and battery cover access bolt hole.

- **IMPORTANT!**--Drill the holes **STRAIGHT THROUGH** the door, or the through-bolts will not fit in the lock! **THIS IS ESSENTIAL!** Drill slowly and **STRAIGHT** through the door.
- Reposition the template as often as needed until it is placed correctly.

Insert the Interface Cylinder

5. Loosen the set screw, then remove the outside cylinder (if present--See Fig. 5).

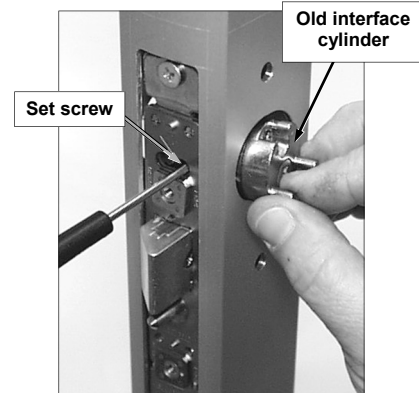


Fig. 5: Loosen set screw before removing the old interface cylinder (if present)

5a. Push in latch and hold latch in all the way.

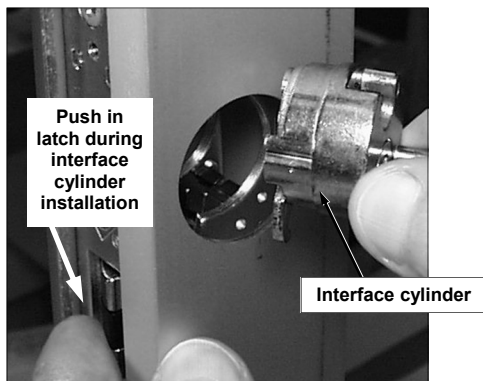


Fig. 5a: Push latch in and hold

5b. While holding in the latch, carefully insert the interface cylinder assembly into the cylinder hole. The hook must be *in front of* the latch retractor and pass *through* the notch in the lock case (see Fig. 5b).

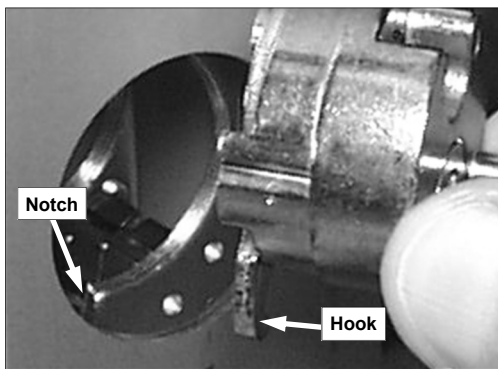


Fig. 5b: While holding latch in, place hook *in front of* the latch retractor and *through* the notch

5c. The interface cylinder must be centered and positioned flush with (or slightly below) the surface of the door (see Fig. 5c).

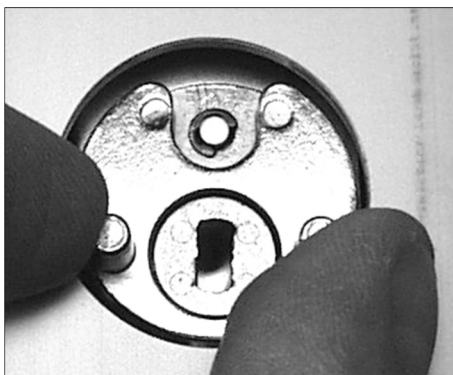


Fig. 5c: Position the interface cylinder

5d. With the interface cylinder HELD SECURELY in its correct position, tighten the set screw, securing the interface cylinder to the lock (see Fig. 5d).

Important! If the interface cylinder is not parallel to the door after tightening the set screw, then you must verify that the original Adams Rite® lock body was originally installed correctly (installed square to the door). Failure to ensure the interface cylinder is installed cor-

rectly could cause lock binding or improper operation of the lock mechanism.



Fig. 5d: Tighten the interface cylinder set screw

5e. Install the latch face plate.



Fig. 5e: Install the latch face plate

Install Lock

6. Install the DL lock onto the door by aligning the two posts on the front of the interface cylinder with the two corresponding holes in the back of the DL lock. Lift the tailpiece slightly to ensure the tailpiece enters the slot of the interface cylinder.



Fig. 6: Install lock onto the door

6a. Secure the DL lock to the door with four through-door mounting screws and two door plates. Place a door plate on top of a pair of mounting holes and *loosely* secure lock from the inside of the door. Snug all four

mounting screws before final tightening. *Do not over-tighten.*

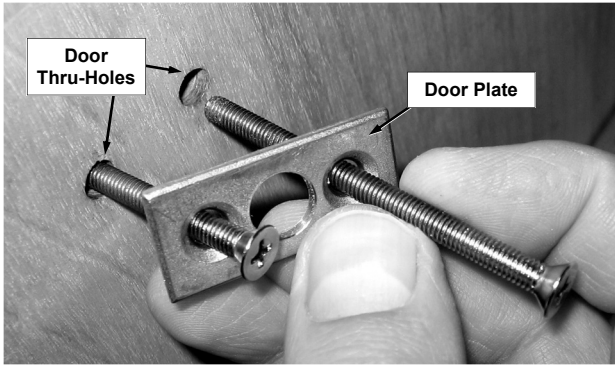


Fig. 6a: Secure lock to door -- loosely at first

6b. Cover door plates with decorative plate covers by sliding them from top to bottom on door plates.

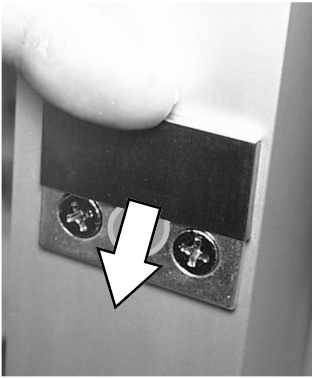


Fig. 6b: Slide down to install decorative plate covers

Connect Batteries

7. Loosen the #8-32 Phillips pan head screw located on the rear side of the base plate at the bottom of the lock (see Fig. 7). Turn counter-clockwise until the battery cover slides off the housing. *Do not remove the screw completely.*



Fig. 7: The Phillips screw on the rear side locks or unlocks the battery cover. *Do not remove screw.*

7a. Plug in the battery connector and insert the battery pack into the battery compartment. Neatly push all

wiring inside the compartment. *Holding battery in place*, slide cover back on. Secure the battery cover by tightening the #8-32 Phillips pan head screw located on the rear side of the base plate (access this screw from the 7/16" thru-hole drilled in the door). *Do not over-tighten the screw.*



Fig. 7a: Install the battery pack: Push all wires inside the battery compartment and slide plate back on.

8. FOR NEW INSTALLATIONS: Refer to programming instructions (OI310, OI311 or OI312) for specific instructions for "First Time Startup" and "Change Factory Master Code" before connecting the battery. The lock must be powered up correctly (and have its factory Master Code changed) or erratic lock behavior can result.

Test operation: See next page.

TEST LOCK OPERATION

Before testing, be sure the lock has been powered-up using the specific instructions in the OI310, OI311 or OI312 manuals.

1. With key removed, ensure that the lever can be pushed down and up. In addition, verify these lever motions DO NOT retract the latch.




Test Step 1

2. Release lever. Insert key and turn key fully *counter-clockwise*.



Test Step 2

3. Push the lever down and the latch should retract.

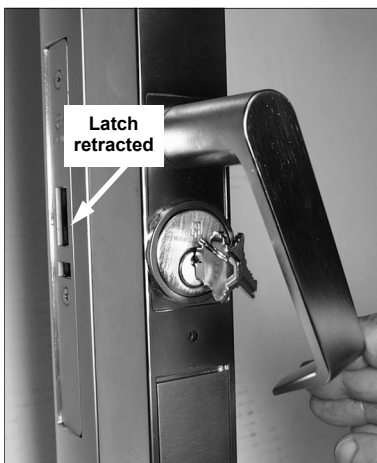

Test Step 3

4. Release lever. Turn key clockwise and remove key. The lever **must not** retract the latch when pressed down.



Test Step 4

5. While pressing the default access code on the lock keypad (press "12345" on the DL1200 and press "123456" on the DL/PDL1300), note the following:
 - For each number key pressed, the red LED lights.
 - When the "5" button is pressed (or the "6" button on the DL/PDL1300):
 1. The green LED flashes for approximately 5 seconds.
 2. The latch retracts when the lever is pushed down.



Test Step 5

6. Test the exit device mounted inside (paddle / egress bar, etc.) and confirm it is operating correctly.

SEE PROGRAMMING INSTRUCTIONS OI310, OI311 or OI312 FOR KEYPAD PROGRAMMING INFORMATION.

ALARM LOCK LIMITED WARRANTY

ALARM LOCK SYSTEMS, INC. (ALARM LOCK) warrants its products to be free from manufacturing defects in materials and workmanship for twenty four months following the date of manufacture. ALARM LOCK will, within said period, at its option, repair or replace any product failing to operate correctly without charge to the original purchaser or user.

This warranty shall not apply to any equipment, or any part thereof, which has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to acts of God, or on which any serial numbers have been altered, defaced or removed. Seller will not be responsible for any dismantling or reinstallation charges, environmental wear and tear, normal maintenance expenses, or shipping and freight expenses required to return products to ALARM LOCK. Additionally, this warranty shall not cover scratches, abrasions or deterioration due to the use of paints, solvents or other chemicals.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. THERE IS NO EXPRESS OR IMPLIED WARRANTY OF MERCHANTABILITY OR A WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. ADDITIONALLY, THIS WARRANTY IS IN LIEU OF ALL OTHER OBLIGATIONS OR LIABILITIES ON THE PART OF ALARM LOCK.

Any action for breach of warranty, including but not limited to any implied warranty of merchantability, must be brought within the six months following the end of the warranty period.

IN NO CASE SHALL ALARM LOCK BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY THE SELLER'S OWN NEGLIGENCE OR FAULT.

In case of defect, contact the security professional who installed and maintains your security system. In order to exercise the warranty, the product must be returned by the security professional, shipping costs prepaid and insured to ALARM LOCK. After repair or replacement, ALARM LOCK assumes the cost of returning products under warranty. ALARM LOCK shall have no obligation under this warranty, or otherwise, if the product has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to accident, nuisance, flood, fire or acts of God, or on which any serial numbers have been altered, defaced or removed. ALARM LOCK will not be responsible for any dismantling, reassembly or reinstallation charges, environmental wear and tear, normal maintenance expenses, or shipping and freight expenses required to return products to ALARM LOCK. Additionally, this warranty shall not cover scratches, abrasions or deterioration due to the use of paints, solvents or other chemicals.

This warranty contains the entire warranty. It is the sole warranty and any prior agreements or representations, whether oral or written, are either merged herein or are expressly cancelled. ALARM LOCK neither assumes, nor authorizes any other person purporting to act on its behalf to modify, to change, or to assume for it, any other warranty or liability concerning its products.

In no event shall ALARM LOCK be liable for an amount in excess of ALARM LOCK's original selling price of the product, for any loss or damage, whether direct, indirect, incidental, consequential, or otherwise arising out of any failure of the product. Seller's warranty, as hereinabove set forth, shall not be enlarged, diminished or affected by and no obligation or liability shall arise or grow out of Seller's rendering of technical advice or service in connection with Buyer's order of the goods furnished hereunder.

ALARM LOCK RECOMMENDS THAT THE ENTIRE SYSTEM BE COMPLETELY TESTED WEEKLY.

Warning: Despite frequent testing, and due to, but not limited to, any or all of the following; criminal tampering, electrical or communications disruption, it is possible for the system to fail to perform as expected. ALARM LOCK does not represent that the product/system may not be compromised or circumvented; or that the product or system will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; nor that the product or system will in all cases provide adequate warning or protection. A properly installed and maintained alarm may only reduce risk of burglary, robbery, fire or otherwise but it is not insurance or a guarantee that these events will not occur. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE, OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING. Therefore, the installer should in turn advise the consumer to take any and all precautions for his or her safety including, but not limited to, fleeing the premises and calling police or fire department, in order to mitigate the possibilities of harm and/or damage.

ALARM LOCK is not an insurer of either the property or safety of the user's family or employees, and limits its liability for any loss or damage including incidental or consequential damages to ALARM LOCK's original selling price of the product regardless of the cause of such loss or damage.

Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages, or differentiate in their treatment of limitations of liability for ordinary or gross negligence, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.