

ASSA ABIOY

## Installation Instructions UniTrol® Door Controls

UNI-1600BC Series Sized Closers
UNI-1601(BF) Series Multi-Sized Closers

An incorrectly installed or improperly adjusted door closer can cause property damage or personal injury.
These instructions should be followed to avoid the possibility of misapplication or misadjustment.

Non Hold Open (UL Listed)
Hold Open (H) (Not UL Listed)

#### Models:

Sized (Sizes 2, 3, 4, 5, 6) **UNI-1602BC(H)** 

UNI-1603BC(H)

UNI-1601BF(H)


Multi-Sized (Sizes 3 thru 6)


UNI-1604BC(H) UNI-1605BC(H) UNI-1606BC(H) (Sizes 1 thru 4) **UNI-1601(H)** 

"DA" suffix (Delayed Action) is an optional feature. A separate instruction will be packed with these instructions, showing valve locations and adjustment procedures.

## Standard Frame Installation

1-7/8 to 4-5/8 Frame Reveals (Uses 6190 Bracket). Bracket illustration page 4 See Page 2

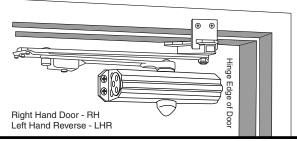


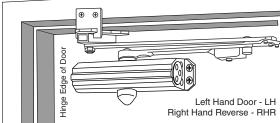


# Deep Frame Installation

Frame Reveals Over 4-5/8 (Uses 6191 Clamp Kit). Bracket illustration page 4.

See Page 3

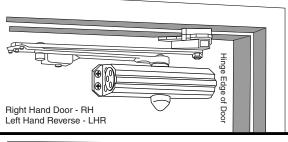


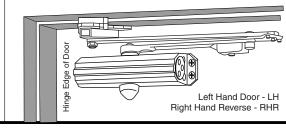


### Flush Transom Installation

Flush Partitions (Uses 2022 Bracket). Bracket illustration page 4.

See Page 4

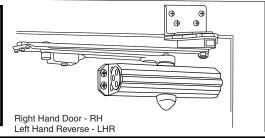


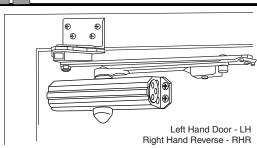

NOTE: For special applications a separate door and frame preparation template is packed with these instructions

Use this instruction sheet for installation sequence and closer adjustments only

- It is recommended that the door on which the door closer will be installed be hung on ball bearing hinges. Door must swing freely
- Door and Frame must be properly reinforced, or use of special fasteners employed, to prevent the mounting screws from pulling out.
- All dimensions are given in inches with corresponding metric dimensions (mm) in parenthesis.

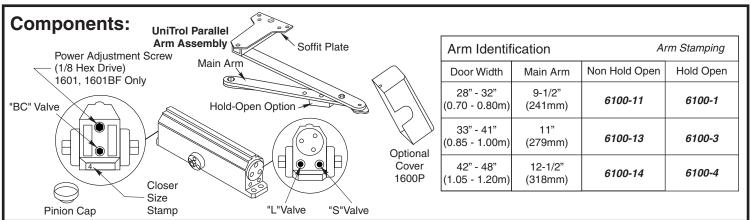


### **Template Information**

- Door template is typical for all installations.
- Frame template must be selected according to frame reveal:




ASSA ABLOY


# Door Template Typical for All Installations Frame Template for 1-7/8 to 4-5/8 Reveals

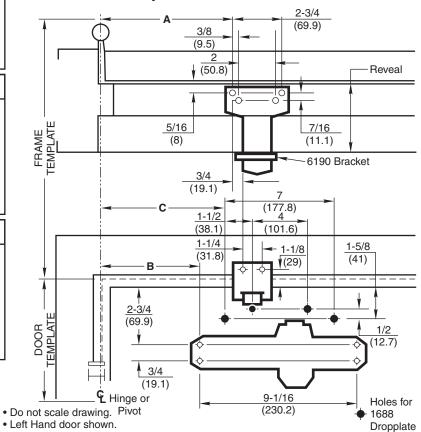


<ul> <li>Dimension</li> </ul>	ns are in inches (mm).		2.0					
	Preparation for Fasteners							
	Fasteners Door or Frame Drill-Sizes							
	Self-Drilling Screw	Aluminum or Metal	No drill required					
	Gen-Drining GCrew	Wood	3/16" (4.30 mm) Pilot hole required					
	1/4" - 20 machine screw	Metal	Drill: #7 (0.201" dia.) Tap: 1/4" - 20					
	Sleeve nuts and bolts	Hollow Metal	9/32" (7 mm) through; 3/8" (9.5 mm) door face opposite to closer					
		Aluminum or Wood	3/8" (9.5 mm) through					

Power Adjustment Chart									
	PARALLEL ARM	*	MAXIMUM DOOR SIZE						
DOOR	INSTALLATION	*	34" (0.85 m)	36" (0.9 m)	40" (1 m)	44" (1.1 m)	48" (1.2 m)		
INT		MENT	2	2	3	4	5		
EXT	1601BF	60° TURNS ADJUSTMENT HAFT	8	9	NOT RECOMMENDED USE 1601				
INT	1001	FULL 360°TU POWER ADJ SHAFT	3	5	7	10	13		
EXT	1601	OF PC	5	7	10	14	16		
*18 -360° TURNS MAXIMUM AVAILABLE									

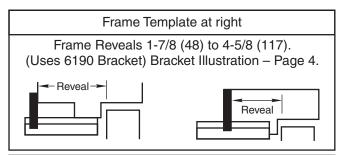

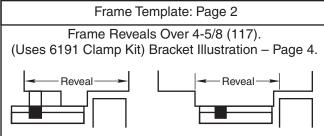

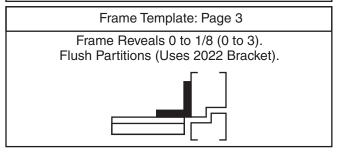


Dimensions for Doors 28" to 32" Wide								
Opening		Dimension A		Dimension B		Dimension C		
Hold Open	Stop	Inches	Inches mm.		mm.	Inches	mm.	
85°	90°	10-1/2	267	8-5/8	219	9-5/8	244	
90°	95°	9-3/4	248	8	203	9	229	
95°	100°	9-1/4	235	7-1/2	191	8-1/2	216	
100°	105°	8-7/8	225	7-1/8	181	8-1/8	206	
105°	110°	8-1/2	216	6-3/4	171	7-3/4	197	
110°	115°	8-1/8	206	6-3/8	162	7-3/8	187	

Dimensions for Doors 33" to 41" Wide								
Openin	g	Dimension A		Dimension B		Dimension C		
Hold Open	Stop	Inches	nches mm.		mm.	Inches	mm.	
85°	90°	12-5/8	321	11	279	12	305	
90°	95°	12	305	10-3/8	264	11-3/8	289	
95°	100°	11-3/8	289	9-3/4	248	10-3/4	273	
100°	105°	10-7/8	276	9-1/4	235	10-1/4	260	
105°	110°	10-3/8	264	8-3/4	222	9-3/4	248	
110°	115°	10	254	8-3/8	213	9-3/8	238	


Dimensions for Doors 42" to 48" Wide								
Opening		Dimension A		Dimension B		Dimension C		
Hold Open	Stop	Inches	Inches mm.		mm.	Inches	mm.	
85°	90°	15	381	13-1/4	337	14-1/4	362	
90°	95°	14-1/4	362	12-1/2	318	13-1/2	343	
95°	100°	13-5/8	346	11-7/8	302	12-7/8	327	
100°	105°	13	330	11-1/4	286	12-1/4	311	
105°	110°	12-1/2	318	10-3/4	273	11-3/4	298	
110°	115°	12	305	10-1/4	260	11-1/4	286	

# Frame Template for Reveals Over 4-5/8 Door Template on Page 2



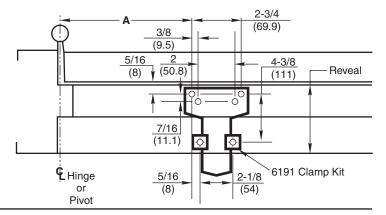

# Frame Template for Flush Partitions Door Template on Page 2

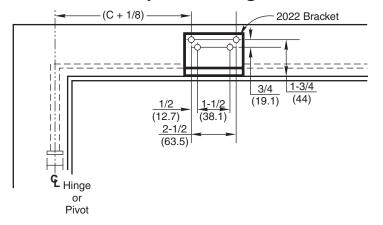

### Installation Sequence

#### Read Front Page.

Installations and component identification are on this page. Arm assembly must be correct for width of door, see chart.

#### • Select Correct Door and Frame Template Combination.

Follow "Template Information" on Page 2 or Pages 2 and 3.


#### . Mark Location of Mounting Holes.

Use dimensions for hold-open or door stop angle desired. Mark position of 4 holes on door for closer (or drop plate) and 6 holes on frame for soffit plate (or 4 for 2022 angle bracket).

#### Prepare Holes for Fasteners.

See "Preparation for Fasteners" chart on Page 2.

 UNI1601 or UNI1601BF Models Only. Set approximate closing power using "Power Adjustment Chart" at bottom of Page 2.

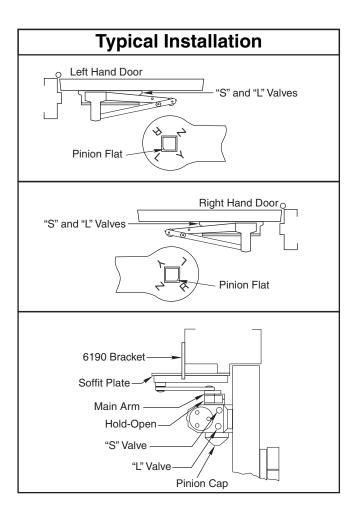

#### Mount Closer to Door.

Drop Plate first, if used. Place end with "S" and "L" valves toward the lock edge of the door. If using optional cover see "Cover" instructions at bottom of Page 4.

#### Mount Arm to Frame.

Fasten soffit plate (or 2022 angle bracket if flush partition) to frame. Mount 6190 bracket or 6191 clamps to reinforce soffit plate.

#### Install Arm on Pinion Shaft.

Close valves "S" and "L". Rotate pinion over 45° to align main arm letter "R" (right hand) or "L" (left hand) with pinion flat. Fasten with arm screw. See "Typical Installation" figure above right. Re-open valves "S" and "L".

 Screw pinion cap onto the pinion shaft by hand or with a Phillips screw driver - DO NOT OVER TIGHTEN. Skip this step if optional cover is used.

### Adjust Closer.

See "Unit Adjustment" on Page 4.


### **Unit Adjustment**

#### **Closing Speed Control**

Valve "S" controls Sweep Range.


Valve "L" controls Latch Range.

Attention: Adjust Closing Speed Time to between 4 to 7 seconds from 90°. Use of the door by handicapped, elderly or small children may require greater closing time. ADA code requires that door take at least 3 seconds to close from 70° of door opening to within 3" (75mm) of the closed position.

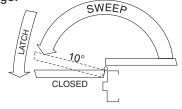


**Closing Cycle** 

NOTE: By law the Americans with Disabilities Act (ADA) may require that door closer installation comply with accessability quidelines.

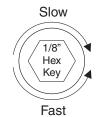

CAUTION: DO NOT BACK VALVES OUT OF CLOSER OR A LEAK WILL RESULT

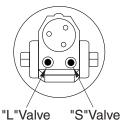


#### **Opening Door Control**


Figure 2

• Backcheck ("BC") valve controls the hydraulic resistance to door opening in backcheck range. NEVER close this valve completely – it is not to provide a positive stop.

**CAUTION:** DO NOT BACK VALVES OUT OF CLOSER OR A LEAK WILL RESULT

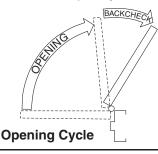




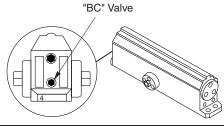


### **Closing Power Control**

Figure 3

Figure 1

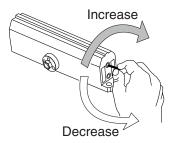

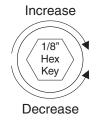

Adjust as required. Product is shipped at mid range power setting.

Power	Adi	ustment	Chart
	, ,,	WOLLING!!!	O I I WI L

	PARALLEL ARM	ماد	MAXIMUM DOOR SIZE						
DOOR	INSTALLATION	*	34" (0.85 m)	36" (0.9 m)	40" (1 m)	44" (1.1 m)	48" (1.2 m)		
INT		360°TURNS R ADJUSTMENT SHAFT	2	2	3	4	5		
EXT	1601BF		8	9	NOT RECOMMENDED USE 1601				
INT	1601	FULL 3	3	5	7	10	13		
EXT		OF PC	5	7	10	14	16		

\*18 -360° TURNS MAXIMUM AVAILABLE


#### **Bracket Illustrations**

Standard 6190 Bracket



Deep Reveal Option Spacer Block Clamps-

4 Bracket

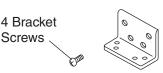

Flush Partition Option

No. 2022 Bracket

## 2 Clamp Screws ~

#### **Cover (Optional Cover 1600P)**

No. 6191 Reinforcing Kit

Thread in screws before mounting closer. Leave enough gap between the head of the screw and the closer to slide the cover on. Slide the cover over the closer and secure the mounting screws after installation is complete.

#### To identify your model:

5=1605BC 3-6=1601 2=1602BC 3=1603BC 6=1606BC

4=1604BC

1-4=1601BF <sub>Size</sub> Date Code Code

#### Figure 4 **Door Holder Option** Hold-Open Force Press & Turn Hold-Open "On" Turn 90° To "Off" To Decrease To Increase Force Force

**Hold-Open** option is found at the arm elbow. To select hold-open "on" or hold-open "off" and to adjust the holdopen force ... use screwdriver as illustrated.



assa abloy

3000 Highway 74 East • Monroe, NC 28112 Tel: (877)-974-2255 • Fax: (800)-338-0965 www.nortondoorcontrols.com

ASSA ABLOY, the global leader in door opening solutions